

PM PLUS

Installation and operating instructions



PM PLUS

English (GB)

Installation and operating instructions	4
---	---

English (GB) Installation and operating instructions

Original installation and operating instructions

Table of contents

1.	General information	4
1.1	Hazard statements	4
1.2	Notes	5
2.	Product description	5
2.1	Intended use	5
2.2	Pumped liquids	5
2.3	Dry-running protection	6
2.4	Operating panel	6
3.	Receiving the product	6
3.1	Inspecting the product	6
4.	Installation requirements	6
4.1	Location	6
5.	Mechanical installation	7
5.1	Position in the pipe system	7
5.2	Installation height	7
6.	Electrical connection	8
6.1	Wiring diagrams	9
7.	Starting up the product	10
7.1	Setting the cut-in pressure	10
8.	Taking the product out of operation	10
8.1	Frost protection	10
9.	Fault finding	11
9.1	The pump does not start	11
9.2	The pump does not start when water is consumed	11
9.3	Frequent starts and stops	11
9.4	The pump does not stop	11
9.5	The green indicator light flashes	11
10.	Technical data	12
10.1	Dimensional drawing	12
11.	Disposing of the product	13
12.	Document quality feedback	13

1. General information

Appliances can be used by persons with reduced physical, sensory, or mental capabilities, as well as persons with a lack of experience and knowledge. This requires that they are given supervision or instruction concerning the use of the appliance in a safe way and that they understand the hazards involved. Cleaning and user maintenance shall not be carried out by children without supervision.



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.

DANGER



Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

WARNING



Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

CAUTION



Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:

SIGNAL WORD



Description of the hazard

Consequence of ignoring the warning

- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Product description



GR-110916

Grundfos PM PLUS is a pressure manager designed for automatic start/stop control of Grundfos or other pumps for water supply in domestic applications. With adjustable start pressure, PM PLUS can easily be customised to your specific application. PM PLUS features automatic protection that stops the pump in case of water shortage, preventing dry running. In case of temporary power outage, PM PLUS automatically resets itself once power is restored.

2.1 Intended use

Typical applications are water supply systems and rainwater systems in:

- one-family houses
- blocks of flats
- summer houses and cottages
- horticulture and gardening
- agriculture.

2.2 Pumped liquids

The product is suitable for clean, thin, non-aggressive and non-explosive liquids without solid particles or fibres that may attack the product mechanically or chemically.

2.3 Dry-running protection

Dry-running protection automatically stops the pump in case of dry running to prevent damage to the pump.

The pressure manager's green indicator light flashes if the pump runs dry.

2.3.1 Automatic restart

The product features automatic restart when the pump stops due to water shortage. In case of a stop, the product automatically makes 10 double attempts over 24 hours to restart. Each attempt lasts 5 seconds.


The product can be manually restarted by pressing the **Reset**-button.

2.3.2 Anti-blocking feature

If the pump is idle for 24 consecutive hours, the product automatically attempts to restart the pump.

2.4 Operating panel

The product offers a user-friendly interface with a **Reset**-button and indicator lights.

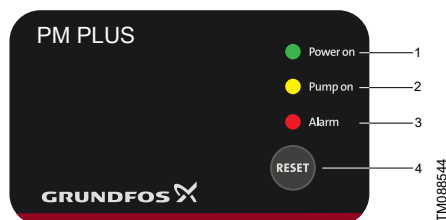

Pos.	Description	Function
1	Power on	The green indicator light is permanently on when the power is on.
2	Pump on	The yellow indicator light is on when the pump is in operation.
3	Alarm	The red indicator light flashes in case of dry running.
4	Reset	The button is used for resetting fault indications.

3. Receiving the product

3.1 Inspecting the product

On receipt of the product, do the following:

1. Check that the product is as ordered.
If the product is not as ordered, contact the supplier.
2. Make sure that the supply voltage and frequency correspond to the values stated on the nameplate of the product.

4. Installation requirements

4.1 Location

Install the product so that inspection, maintenance and service can easily be performed.

Install the product in a well-ventilated location to ensure cooling of its components.

The product can be installed indoors or outdoors, but it must be protected from exposure to direct sunlight, rain and snow.

5. Mechanical installation

5.1 Position in the pipe system


Install the pressure manager on the outlet side of the pump.

The pressure manager can be fitted directly to the system manifold outlet port or between the manifold and the first tapping point.

Example

The pressure manager can be installed in systems with or without a pressure tank.

Observe these general recommendations when you install the pressure manager:

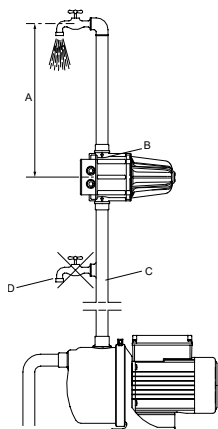

TM083740

5.2 Installation height

The pressure manager can be fitted directly to the outlet port of the pump or between the pump and the first draw-off point.

The arrows on the pressure manager indicate the flow direction.

Always install the pressure manager with the arrows pointing upwards.

Cut-in pressure	1.5 bar (22 psi)	2 bar (29 psi)	2.5 bar (36 psi)	3 bar (44 psi)
Number of floors	5	6	8	10
Building height	15 m (49 ft)	25 m (82 ft)	30 m (98.4 ft)	35 m (114.8 ft)
Min. pump pressure	3 bar (44 psi)	3.5 bar (51 psi)	4 bar (58 psi)	4.5 bar (65 psi)

Pos. Installation instructions

- | | |
|---|---|
| A | Observe the recommended maximum installation height between the pressure manager and the highest tapping point. |
| B | Install the pressure manager, so that the operating panel is visible and easy to access. |
| C | Do not install draw-off points between the pump and the pressure manager. |
| D | Do not install taps between the pump and the pressure manager. |

Non-return valve

If you pump from a well, borehole or similar, always fit a non-return valve on the inlet side.

6. Electrical connection

WARNING

Electric shock

Death or serious personal injury



- Switch off the power supply before you start any work on the product. Make sure that the power supply cannot be switched on accidentally.

WARNING

Electric shock

Death or serious personal injury



- Connect the product to protective earth and provide protection against indirect contact in accordance with local regulations.
- Power cables without a plug must be connected to a supply disconnecting device incorporated in the fixed wiring according to the local wiring rules.
- The installation must be fitted with a residual-current device (RCD) with a tripping current less than 30 mA.
- The pressure manager must be connected to an external mains switch with a contact gap of at least 3 mm in all poles.



All electrical connections must be carried out by qualified persons in accordance with local regulations.




The product can be powered by a generator or other alternative power supplies, provided that the requirements for the power supply are fulfilled.

Connect products delivered with a power plug using the supplied cable and plug.


Connect products with no fitted cable and plug according to the following instructions:

1. Remove the operating panel from the front of the product.

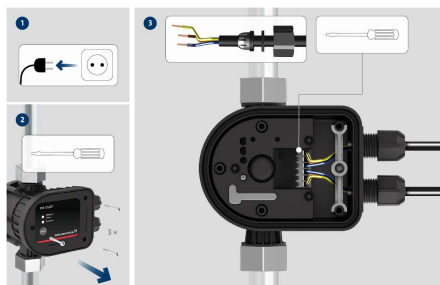


TM087723

2. Make the electrical connection according to the wiring diagram.
3. Fit the operating panel securely with all four mounting screws to maintain enclosure class IP65.

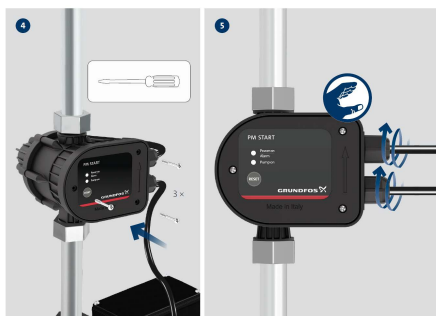


TM087724

6.1 Wiring diagrams

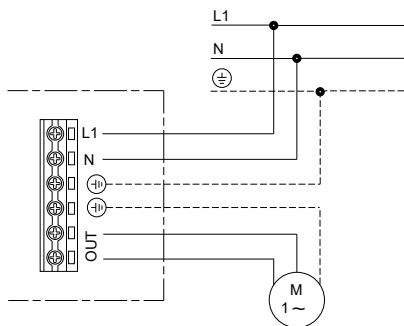

TM083771

Wiring diagram for one-phase pumps

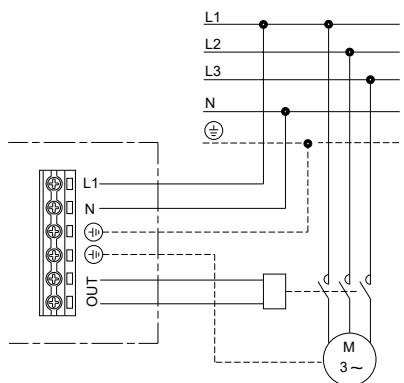

TM083773

Wiring diagram for three-phase pumps

7. Starting up the product

7.1 Setting the cut-in pressure

Follow the instructions below to set the cut-in pressure values.

1. Set the desired cut-in pressure by turning the screw on the back of the product. Turn clockwise to increase the cut-in pressure value and counterclockwise to decrease the cut-in pressure value.



TM087980

2. See the correct settings of the cut-in pressure in the table below.

Cut-in pressure	1.5 bar (22 psi)	2 bar (29 psi)	2.5 bar (36 psi)	3 bar (44 psi)
-----------------	---------------------	-------------------	---------------------	-------------------

8. Taking the product out of operation

8.1 Frost protection

If the pressure manager is subjected to frost in periods of inactivity, the pressure manager and the pipes must be drained before the pressure manager is taken out of operation.

1. Shut off the water supply to the system.
2. Drain the isolated system at the lowest located point in the system. Make sure that pumps and pressure manager are drained separately.

9. Fault finding

DANGER

Electric shock

Death or serious personal injury



- Before starting work on the pump or the pressure manager, make sure that the power supply has been switched off, and that it cannot be switched on accidentally.

9.1 The pump does not start

Cause	Remedy
The fuses in the electric installation are blown.	• Replace the fuses. If the new fuses also blow, check the electrical installation.
The earth leakage circuit breaker or voltage-operated circuit breaker has tripped.	• Cut in the circuit breaker.
No power supply.	• Contact the power supplier.
The motor protection has cut off the power supply due to overload.	• Check whether the motor or pump is blocked.
The pump is defective.	• Repair or replace the pump.
The device is off.	• Replace the control box.

9.2 The pump does not start when water is consumed

The indicator light is on.

Cause	Remedy
The system pressure is too high.	• Open a tap to reduce the pressure.
Too big distance of height between the product and the draw-off point.	• Adapt the installation.

9.3 Frequent starts and stops

Cause	Remedy
Leakage in the pipes lower than 1 l/min.	• Check and repair the pipes.

9.4 The pump does not stop

Cause	Remedy
A tap is open.	• Close the tap.
Leakage in the pipes higher than 1 liter/min.	• Check and repair the pipes.
The product is installed in horizontal position.	• Install the product in vertical position.


9.5 The green indicator light flashes

Cause	Remedy
Insufficient flow.	• Check the pipes.
The pump starts to self prime.	• Start the pump again.
The pump is unable to deliver the required outlet pressure.	• Adjust the installation. • Replace the pump.
The pump or pressure manager is defective.	• Replace the pump or pressure manager.

10. Technical data

Supply voltage	115/230 VAC, $\pm 10\%$, 50/60 Hz
Max. current	10 A
Max. power at 115 VAC	0.75 kW (1 hp)
Max. power at 230 VAC	1.5 kW (2 hp)
Protection class	IP 65
Max. operating pressure	12 bar (174 psi)
Max. operating temperature	60 °C (140 °F)
Min. flow rate	≈ 1 l/min (0.26 gpm)
Connection type	G1"

10.1 Dimensional drawing

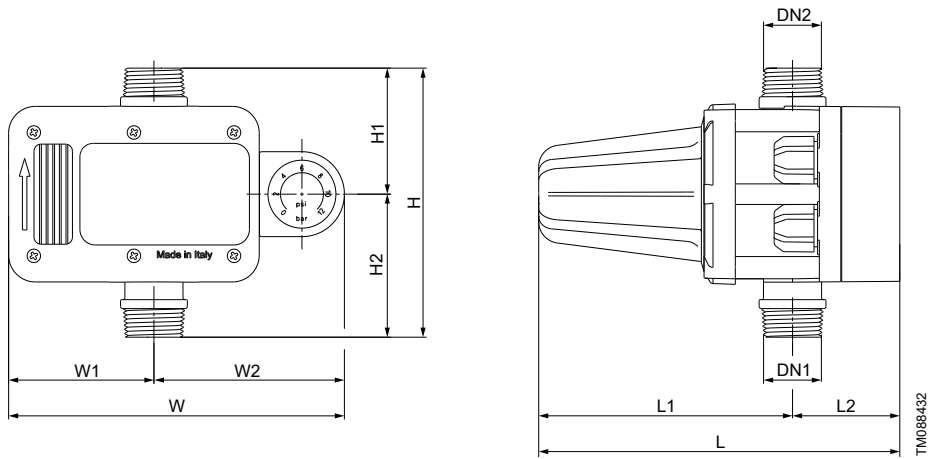

Product	Dimensions [mm]									DN1, DN2 [inch]
	L	L1	L2	W	W1	W2	H	H1	H2	
	mm inch]	mm inch]	mm inch]	mm inch]	mm inch]	mm inch]	mm inch]	mm inch]	mm inch]	
PM PLUS	200 [7.9]	140 [5.5]	60 [2.4]	188 [7.4]	81 [3.2]	107 [4.2]	150 [5.9]	70 [2.8]	80 3.1]	G1

11. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheeled bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

12. Document quality feedback

To provide feedback about this document, scan the QR code using your phone's camera or a QR code app.



[Click here to submit your feedback](#)

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Industrias
1619 - Garin Pcia. de B.A.
Tel.: +54-3327 414 444
Fax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Tel.: +61-8-8461-6611
Fax: +61-8-8340-0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Fax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Fax: +32-3-870 7301

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A
BiH-71000 Sarajevo
Tel.: +387 33 592 480
Fax: +387 33 590 465
www.ba.grundfos.com
E-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Tel.: +55-11 4393 5533
Fax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel.: +359 2 49 22 200
Fax: +359 2 49 22 201
E-mail: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106 PRC
Tel.: +86 21 612 252 22
Fax: +86 21 612 253 33

Colombia

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Tel.: +57(1)-2913444
Fax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Tel.: +385 1 6595 400
Fax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS Sales Czechia and Slovakia
s.r.o.
Čajkovského 21
779 00 Olomouc
Tel.: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tel.: +45-87 50 50 50
Fax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel.: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Tel.: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Fax: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Fax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Tel.: +0030-210-66 83 400
Fax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor, Siu Wai Industrial
Centre
29-33 Wing Hong Street & 68 King Lam
Street, Cheung Sha Wan
Kowloon
Tel.: +852-27861706 / 27861741
Fax: +852-27858664

Hungary

GRUNDFOS South East Europe Kft.
Tópark u. 8
H-2045 Törökbálint
Tel.: +36-23 511 110
Fax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Tel.: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Graha intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Tel.: +62 21-469-51900
Fax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Tel.: +353-1-4089 800
Fax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Fax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Tel.: +81 53 428 4760
Fax: +81 53 428 5005

Kazakhstan

Grundfos Kazakhstan LLP
7' Kyz-Zhibek Str., Kok-Tobe micr.
KZ-050020 Almaty Kazakhstan
Tel.: +7 (727) 227-98-55/56

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Tel.: +82-2-5317 600
Fax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60
LV-1035, Rīga,
Tel.: + 371 714 9640, 7 149 641
Fax: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel.: +370 52 395 430
Fax: +370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam UI/25
Glenmarie Industrial Park
40150 Shah Alam, Selangor
Tel.: +60-3-5569 2922
Fax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México
S.A. de C.V.
Boulevard TLC No. 15
Parque industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Tel.: +52-81-8144 4000
Fax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Fax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Tel.: +64-9-415 3240
Fax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tel.: +47-22 90 47 00
Fax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel.: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Fax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
S-PARK BUSINESS CENTER, Clădirea
A2, etaj 2
Str. Tipografilor, Nr. 11-15, Sector 1, Cod
013714
București, Romania
Tel.: 004 021 2004 100
E-mail: romania@grundfos.ro

Serbia

Grundfos Srbija d.o.o.
Ormladinskih brigada 90b
11070 Novi Beograd
Tel.: +381 11 2258 740
Fax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Tel.: +65-6681 9688
Fax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D 821 09 BRATISLAVA
Tel.: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Tel.: +386 (0) 1 568 06 10
Fax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Fax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Fax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Fax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Tel.: +886-4-2305 0868
Fax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road
Dokmai, Pravej, Bangkok 10250
Tel.: +66-2-725 8999
Fax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
Stl.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi
2. yol 200, Sokak No. 204
41490 Gebze/ Kocaeli
Tel.: +90 - 262-679 7979
Fax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ "ГРУНДФОС УКРАЇНА"
Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 01313, Україна
Tel.: (+38 044) 237 04 00
Fax: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone, Dubai
Tel.: +971 4 8815 166
Fax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Tel.: +44-1525-850000
Fax: +44-1525-850011

U.S.A.

Global Headquarters for WU
856 Koomey Road
Brookshire, Texas 77423 USA
Phone: +1-630-236-5500

Uzbekistan

Grundfos Tashkent, Uzbekistan
The Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Tel.: (+998) 71 150 3290 / 71 150 3291
Fax: (+998) 71 150 3292

93286837 12.2024

ECM: 1410074
